








Evokit cartongesso - Evokit placo - Evokit p.board - Evokit pladur


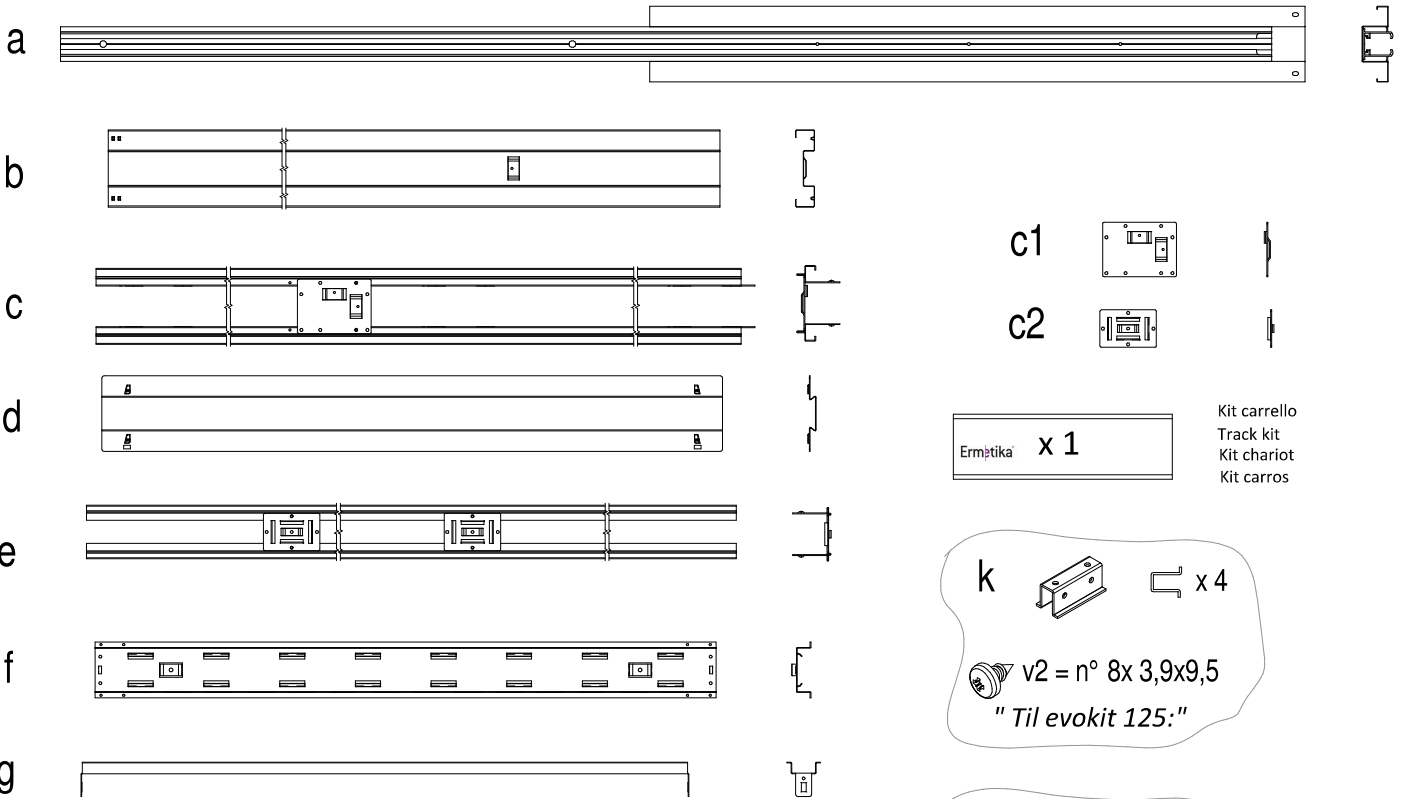


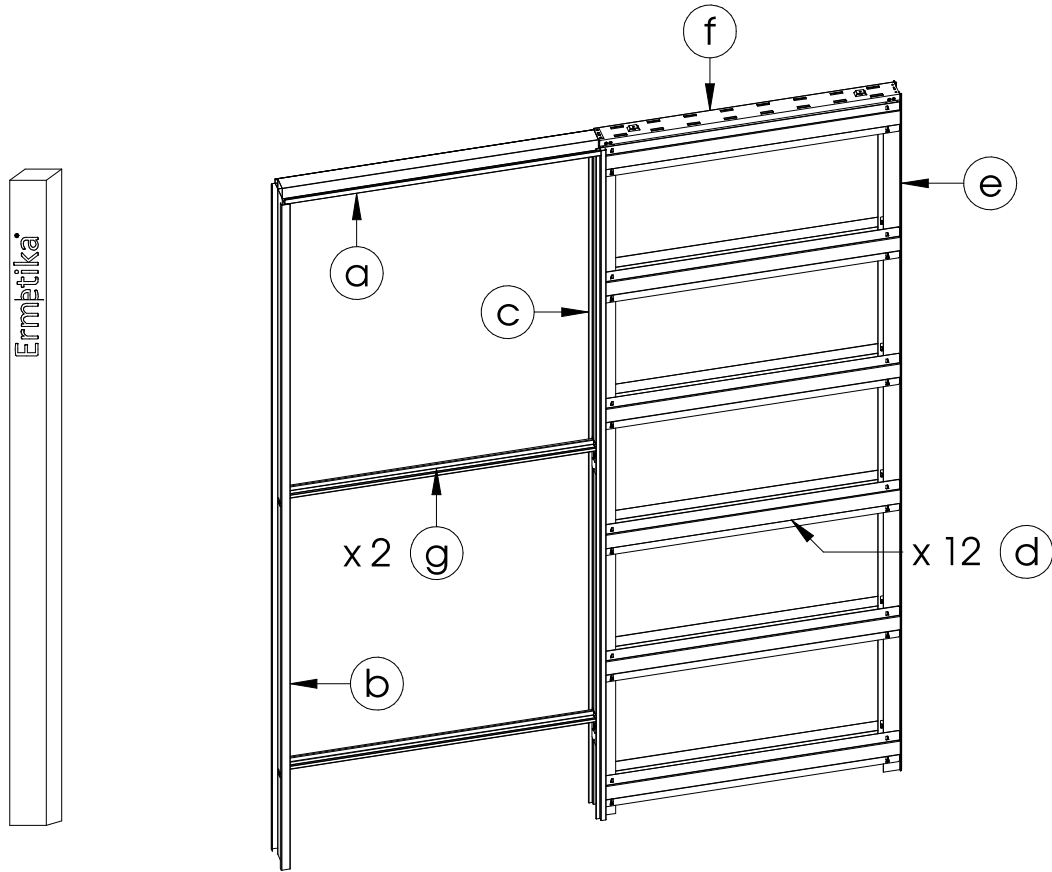



IT - ISTRUZIONI MONTAGGIO CONTROTELAIO EVOKIT CARTONGESSO  
EN - SET UP INSTRUCTIONS POCKET SLIDING SYSTEM EVOKIT P.BOARD  
FR - INSTRUCTIONS MONTAGE CONTRE-CHASSIS EVOKIT PL. DE PLATRE  
ES - INSTRUCCIONES DE MONTAJE ARMAGON EVOKIT PLADUR  
FI - EVOKIT-LIUKUOVIJÄRJESTELMÄN ASENNUSOHJE KIPSILEVYSEINÄLLE  
DK - MONTAGE VEJLEDNING INDBYG PRO EVOKIT - 1 LAG GIBS

# Evokit 100-125




- c1  
- c2  
-  x 1 Kit carrello  
Track kit  
Kit chariot  
Kit carros

- k   x 4
-  v2 = n° 8x 3,9x9,5  
"Til evokit 125:"



-  v3 = n° 8x 4,8x9,5
-  v5 = n° 2x 3,5x25
-  v1 = n° 60x 3,9x19

# Evokit 100


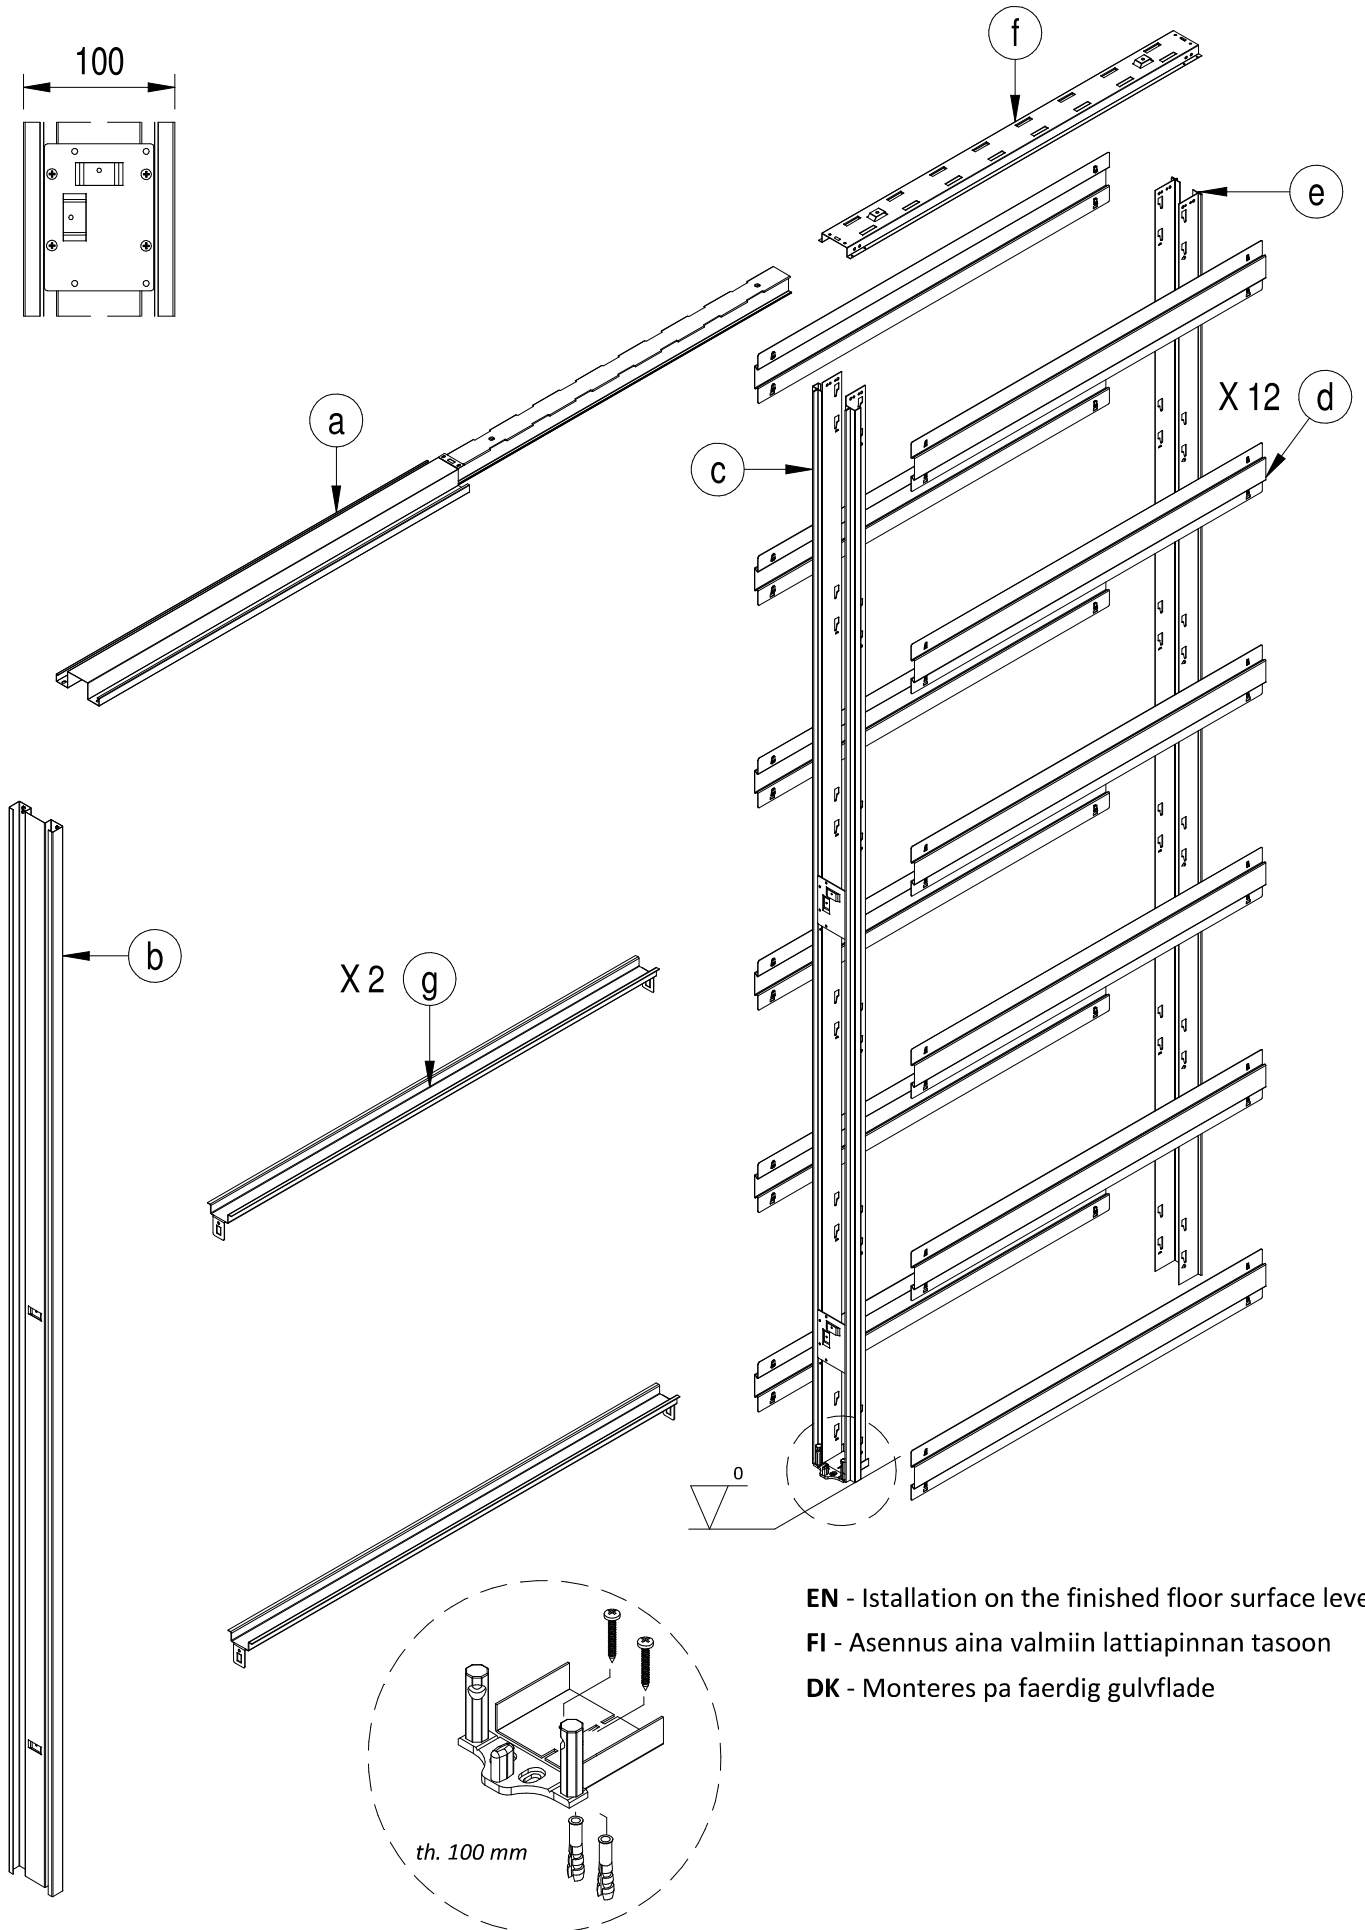


# Evokit 100



1

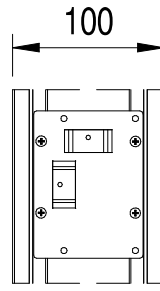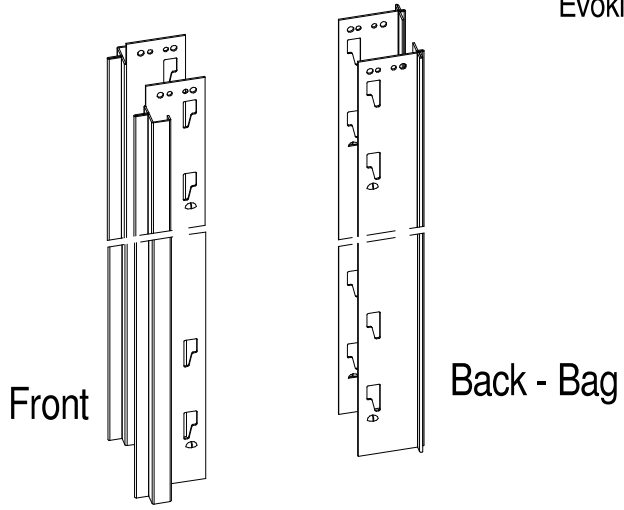



2

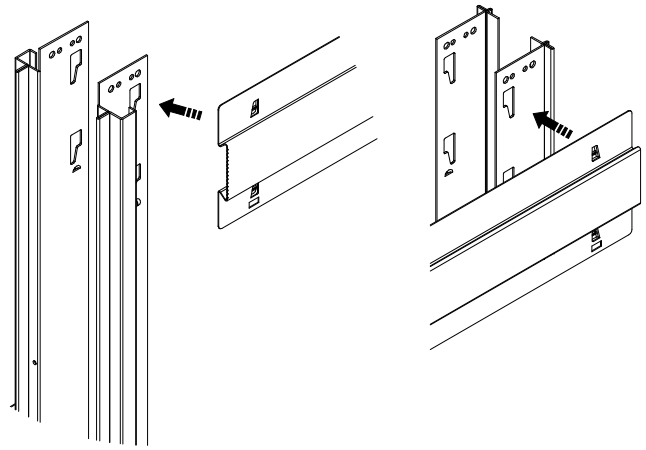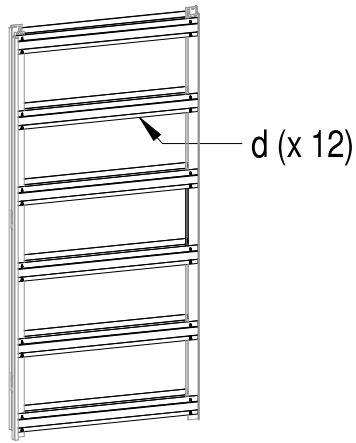

3

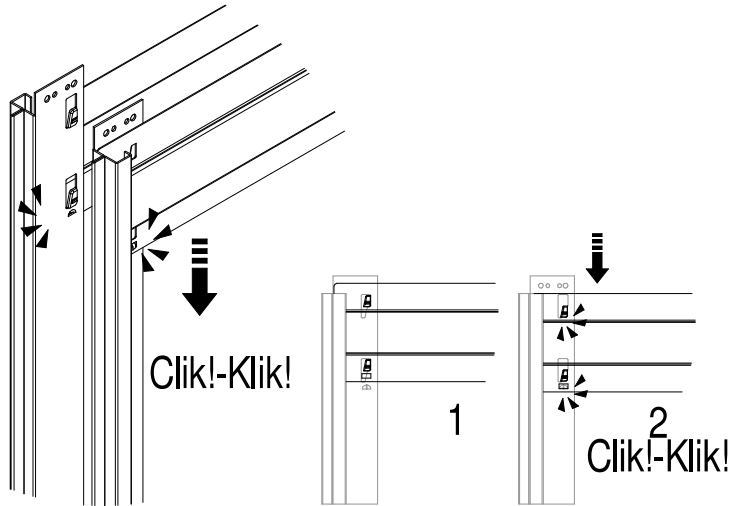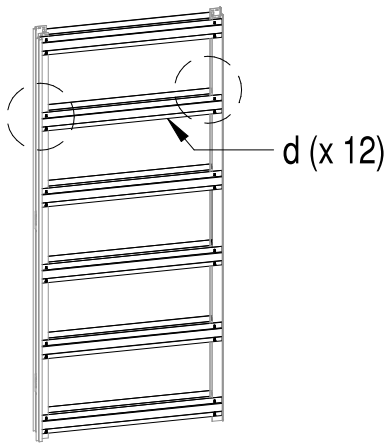




4

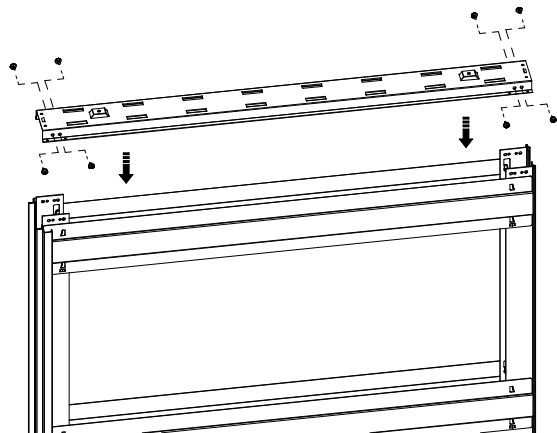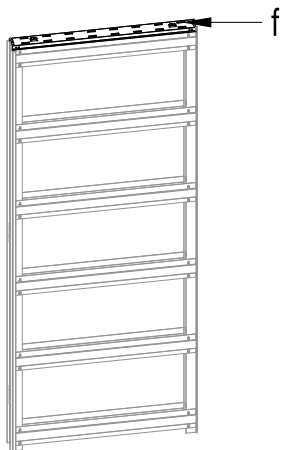




v3 = n° 8x 4,8x9,5




5

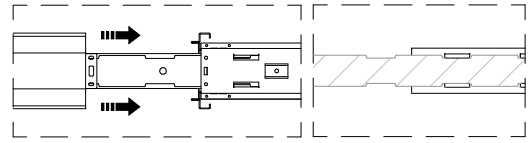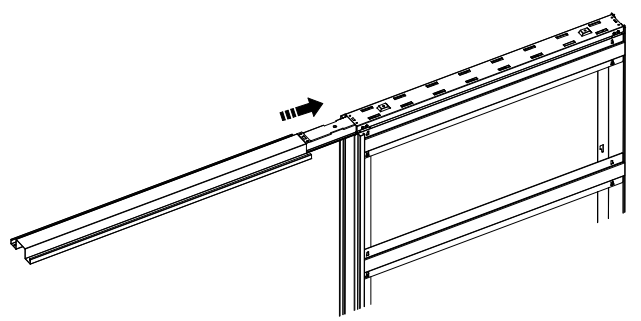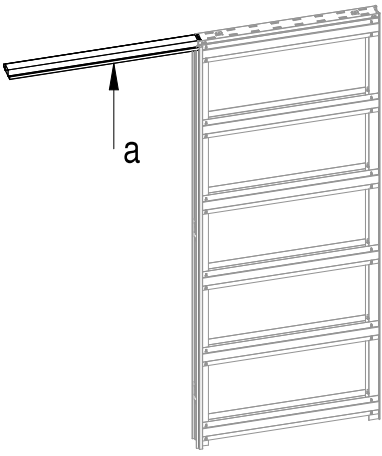



6

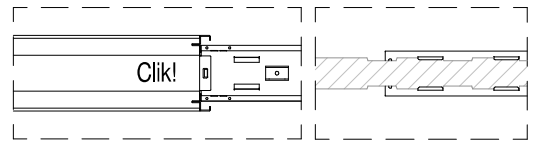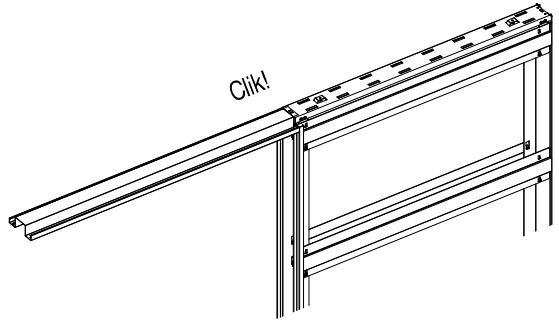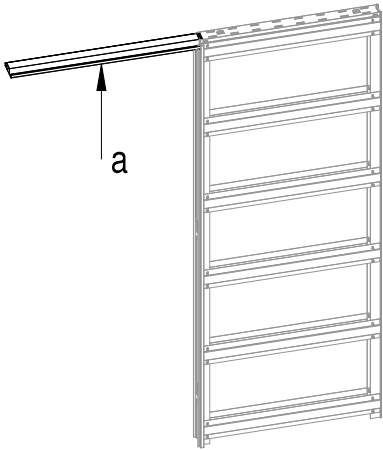



7

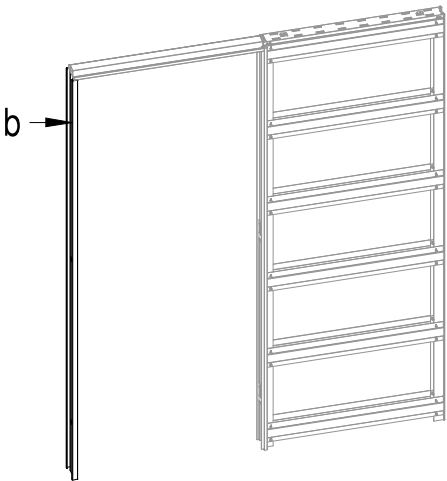

v5 = n° 2x 3,5x25

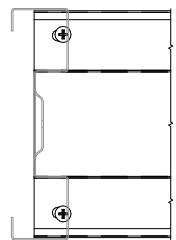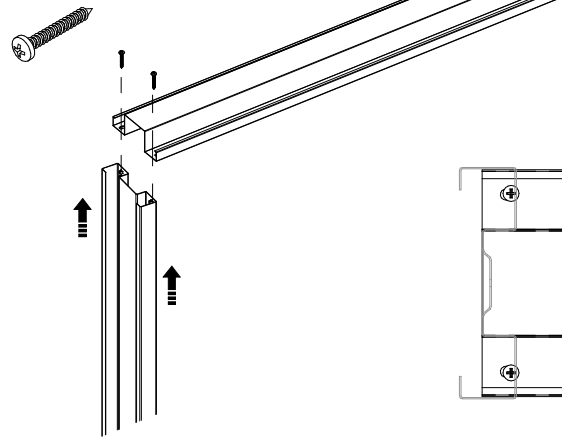




8

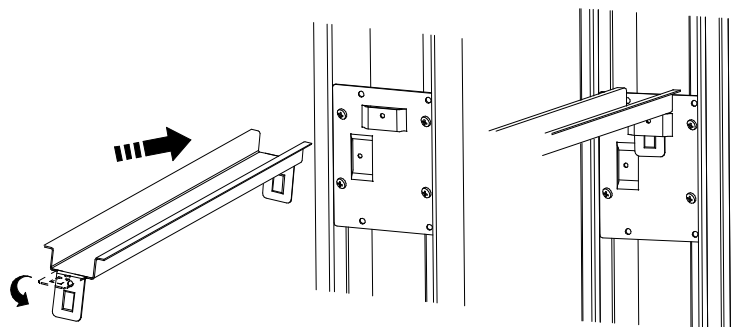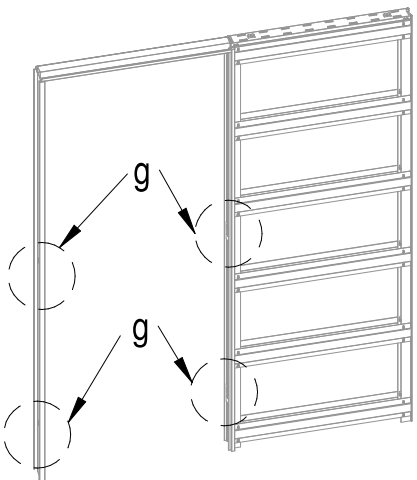


# Evokit 100

Posizionamento su tramezzo - Framing - Montage

Installation sur structure placo - Fijacion de la estructura - Ovikeyksen sijoittaminen seinärakenteeseen

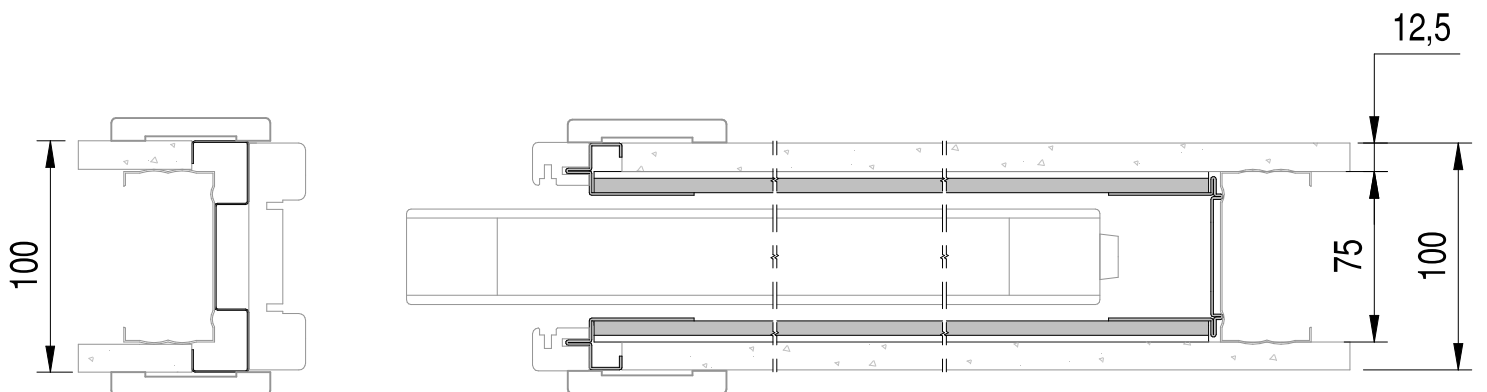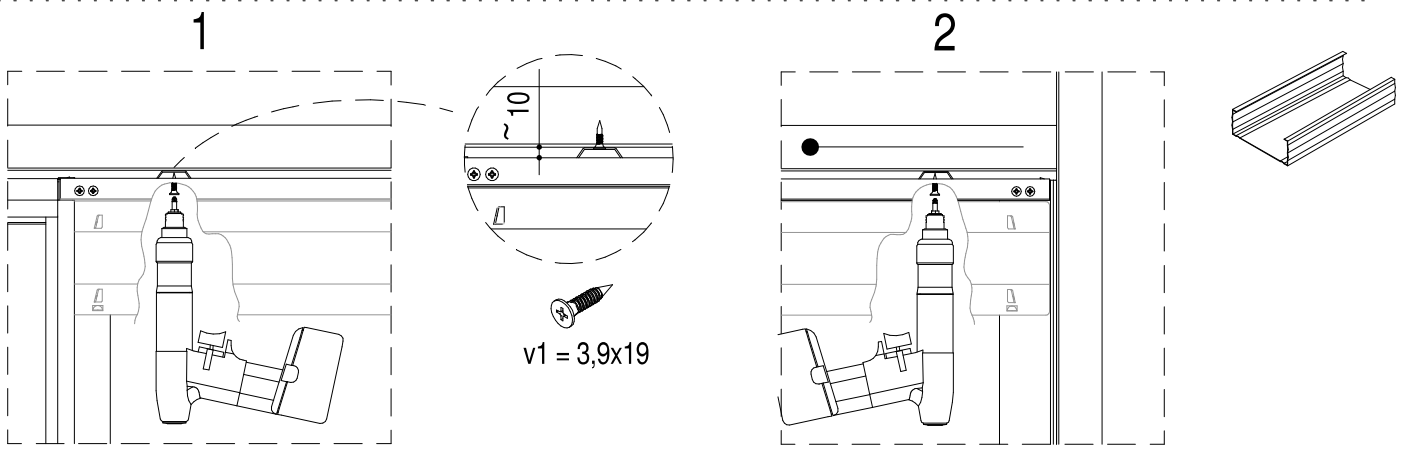
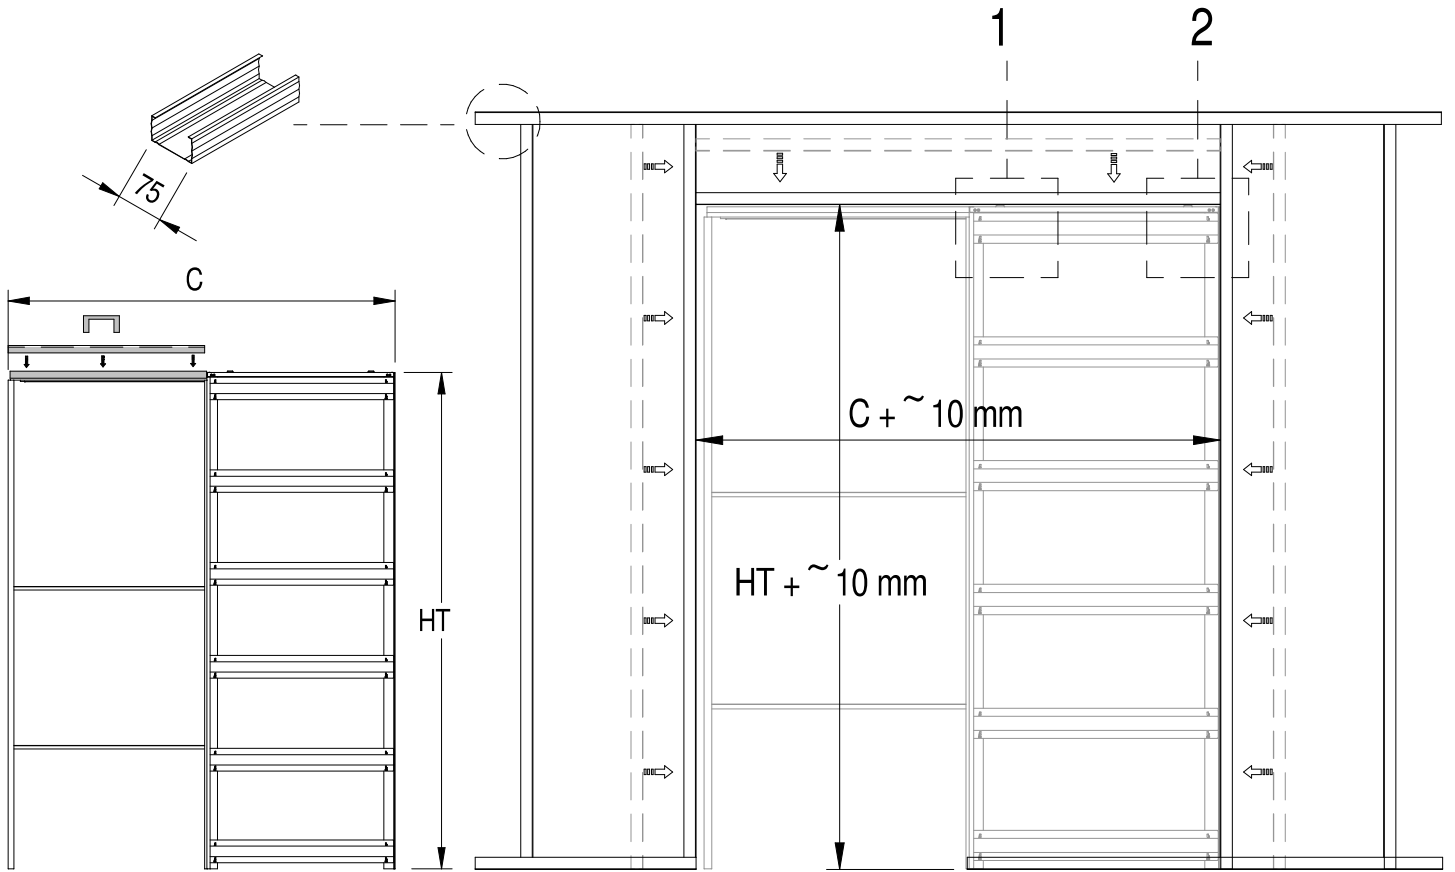


# Evokit 125


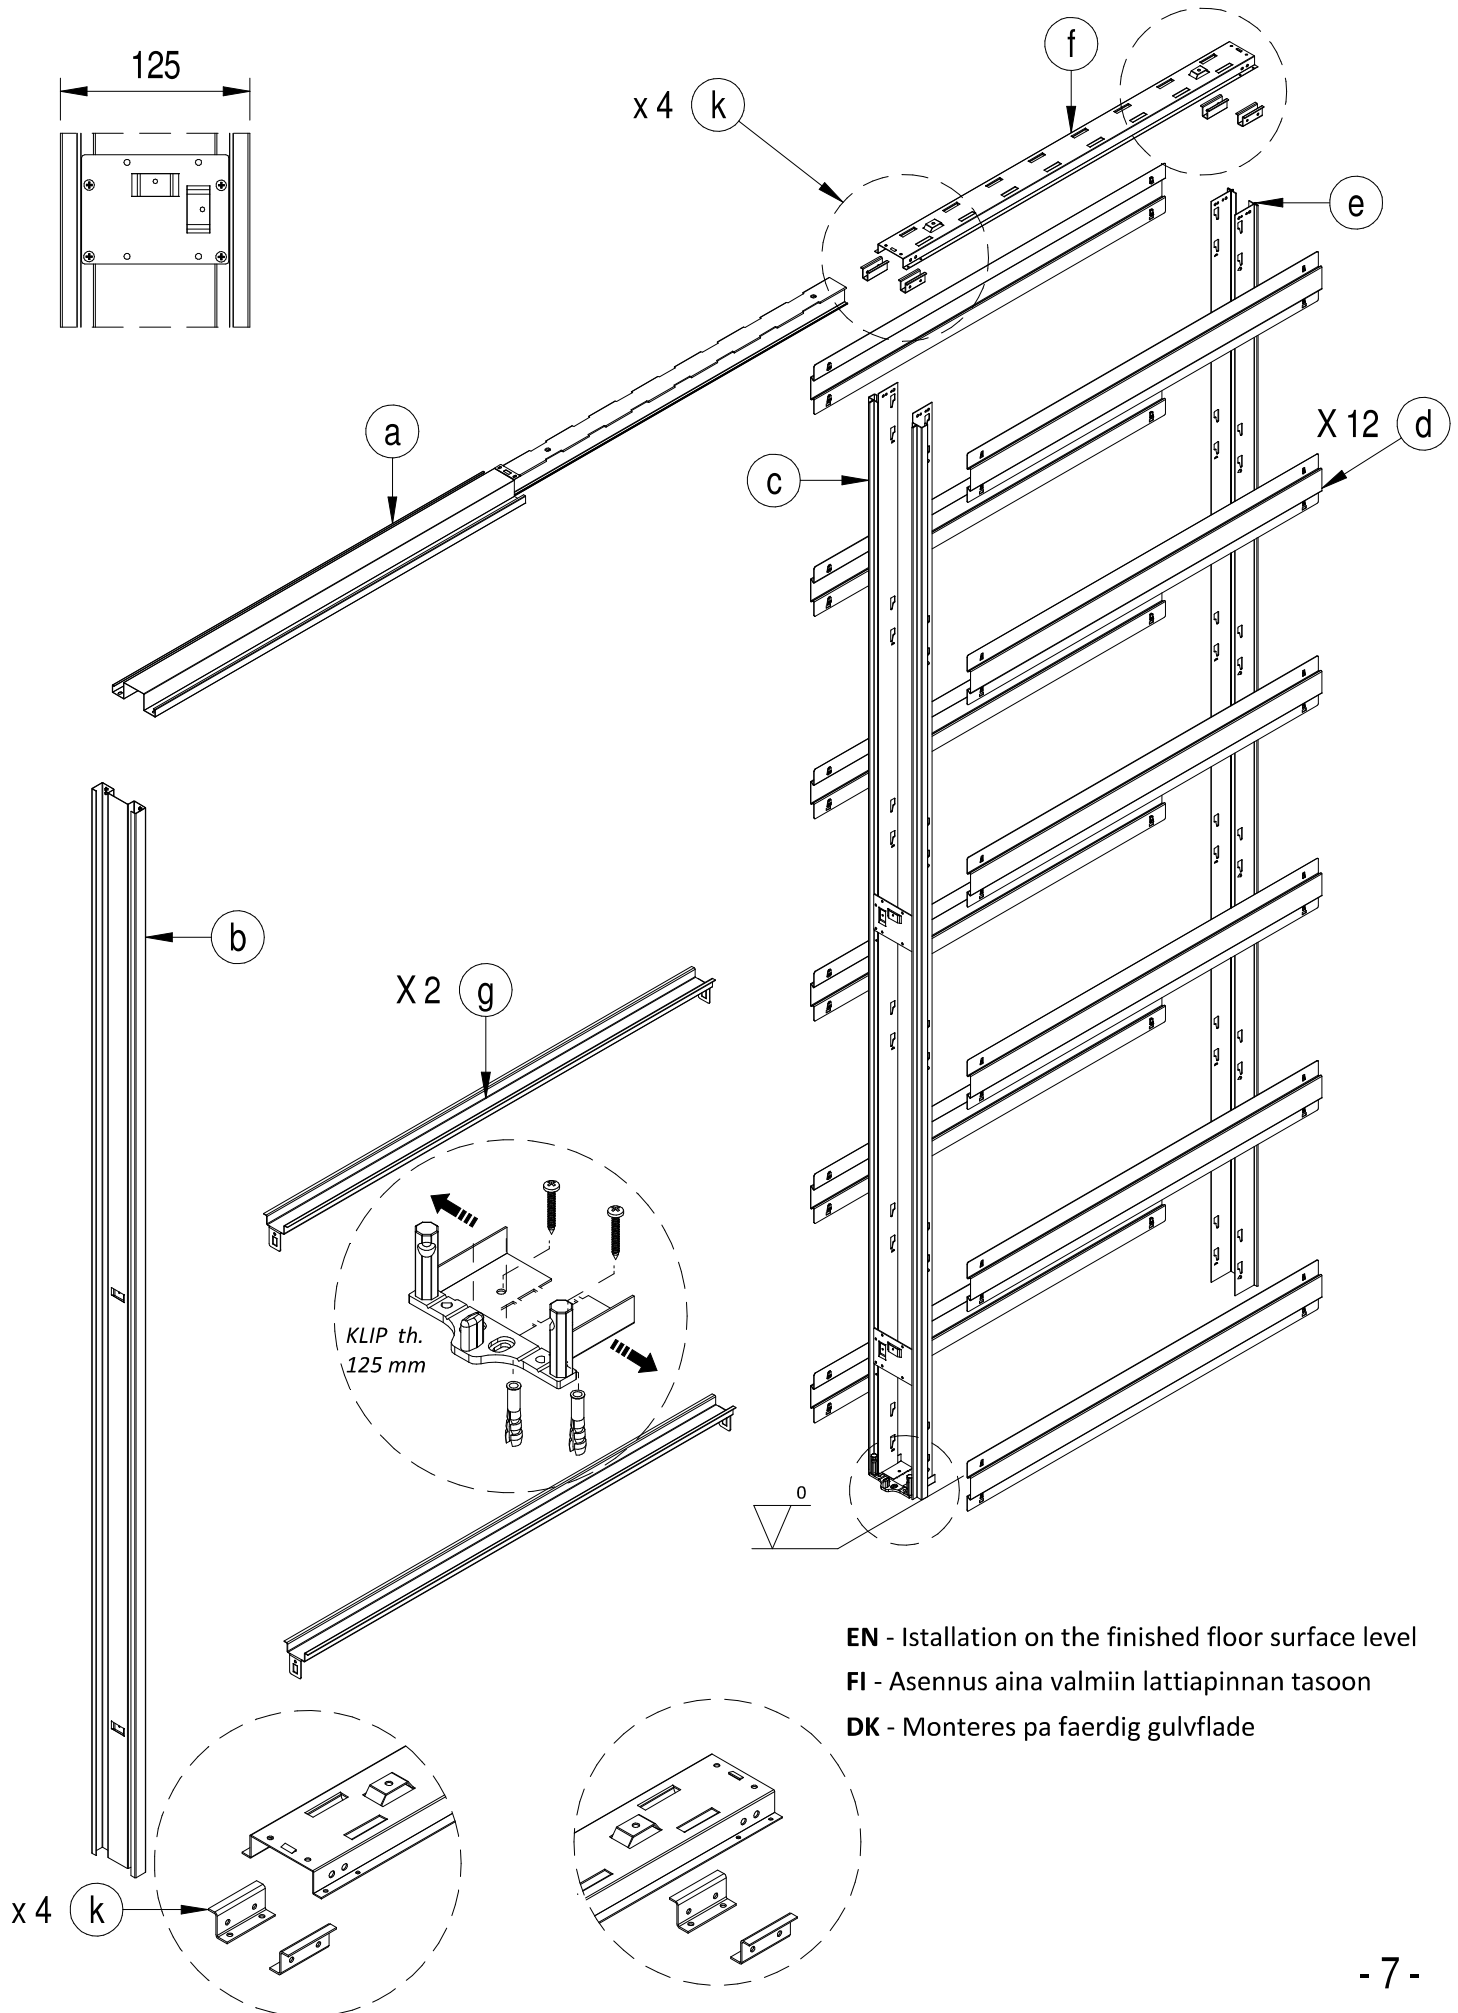


# Evokit 125



1.1

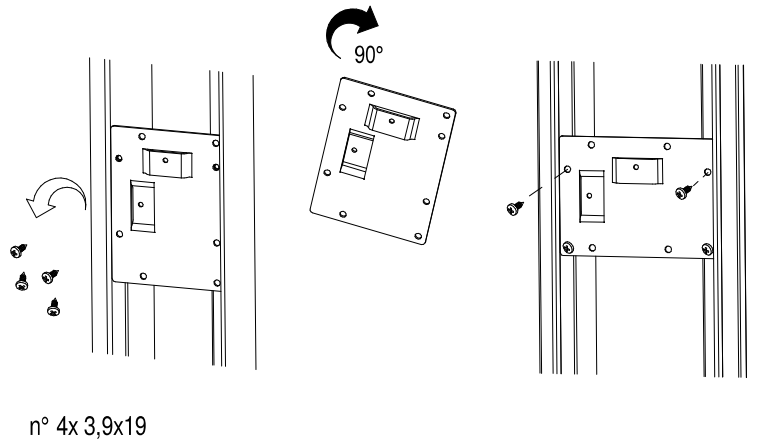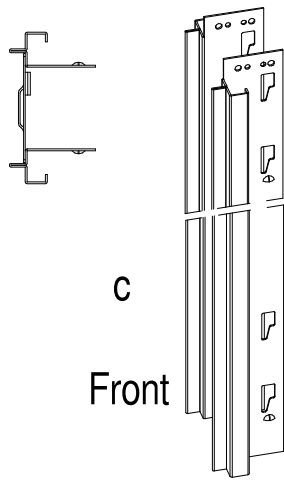



2.1

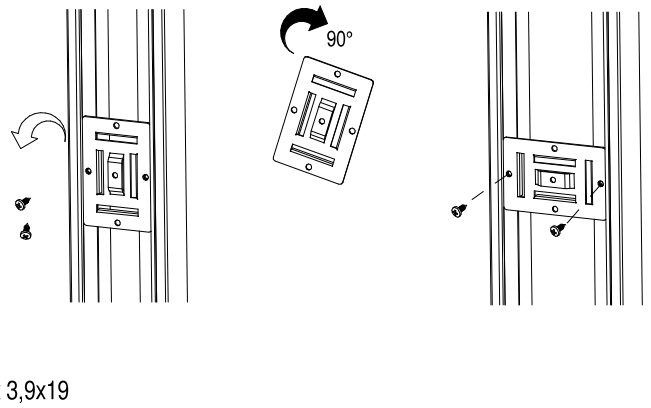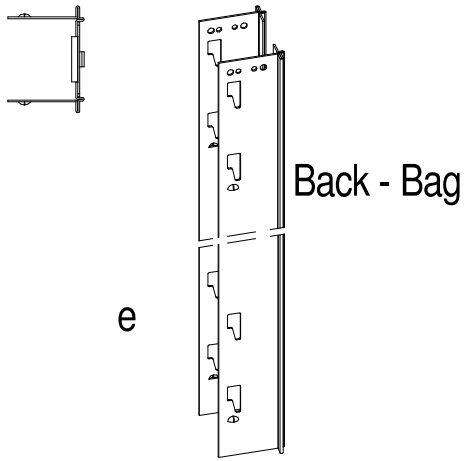

3.1

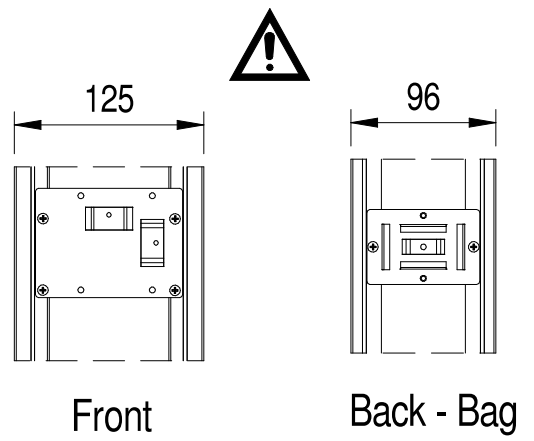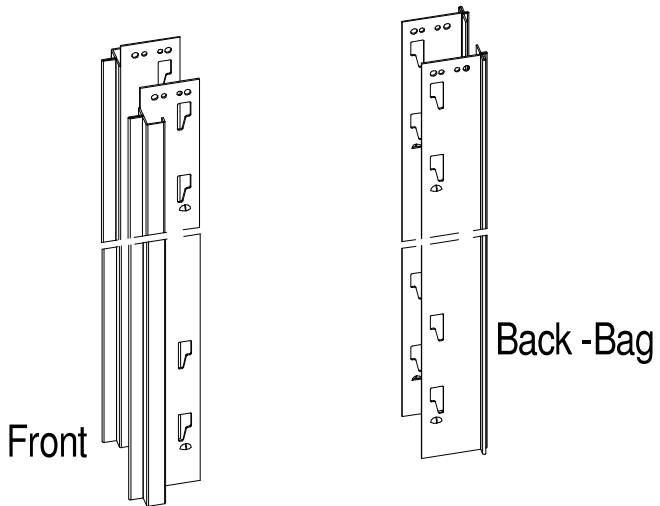




4.1

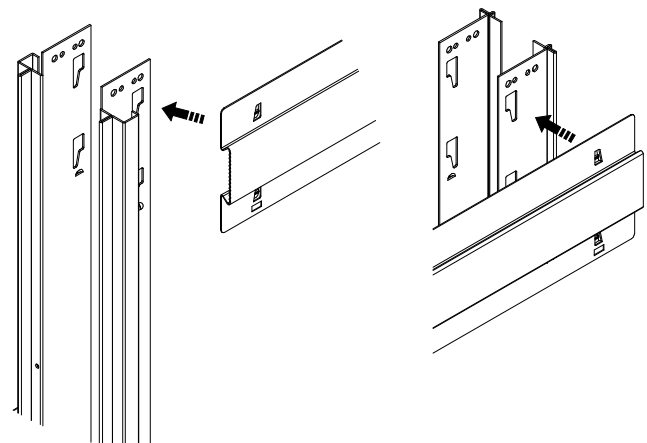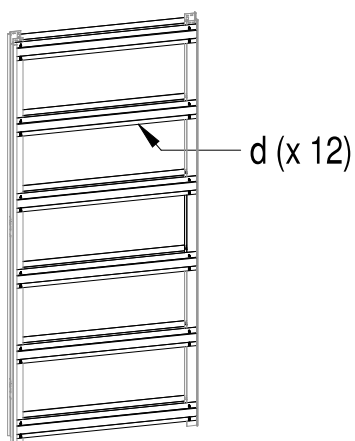




Evokit 125



5.1

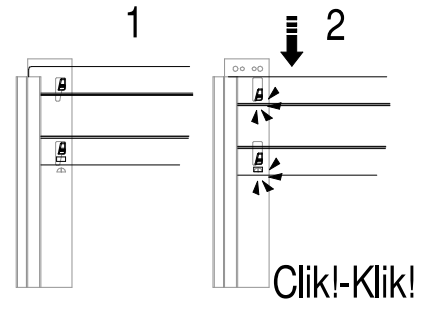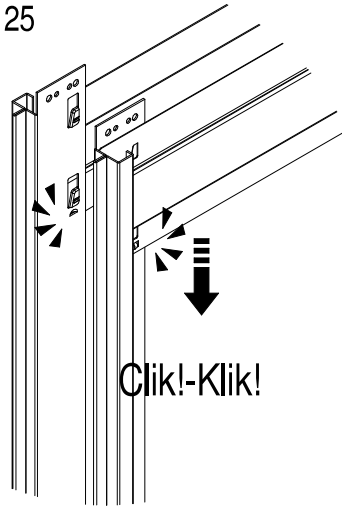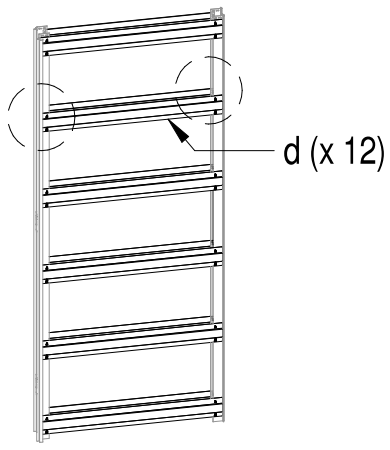



6.1

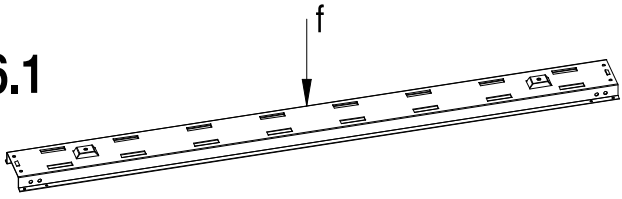

v2 = n° 8x 3,9x9,5

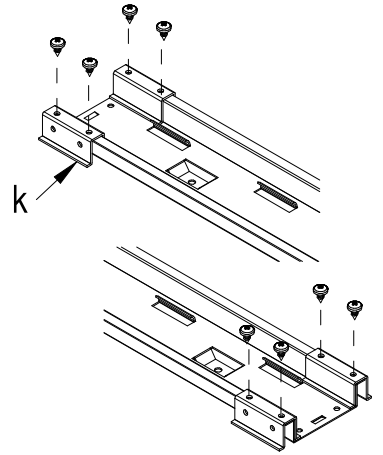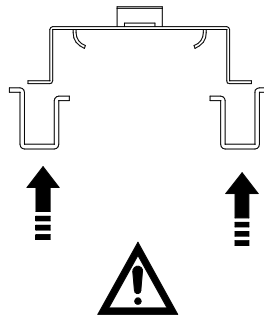




7.1

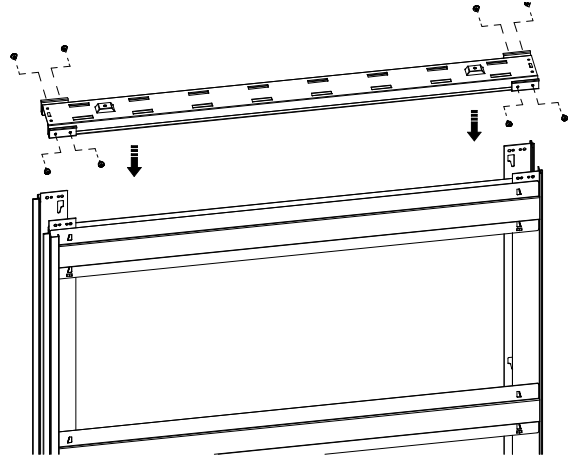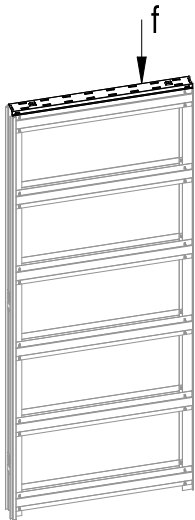




v3 = n° 8x 4,8x9,5




8.1

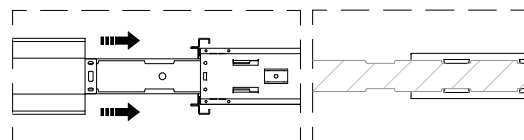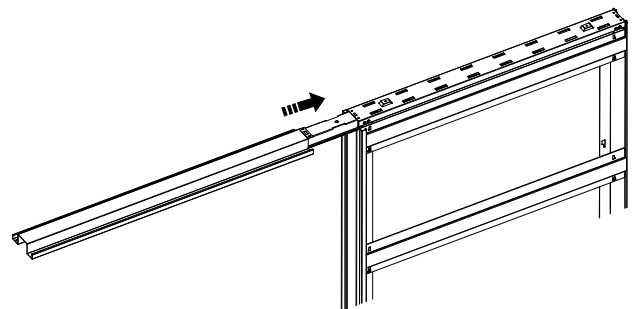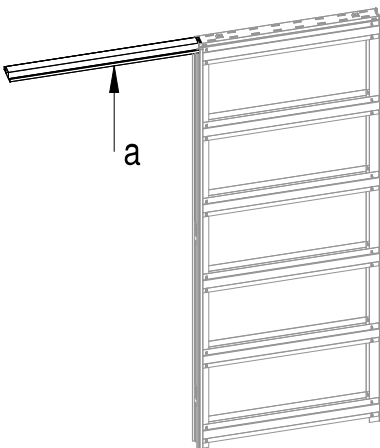


9.1

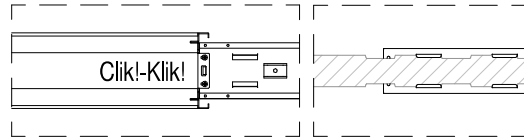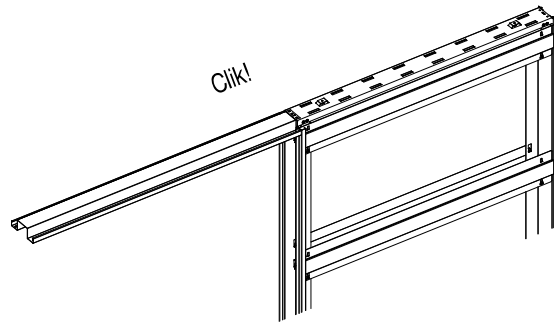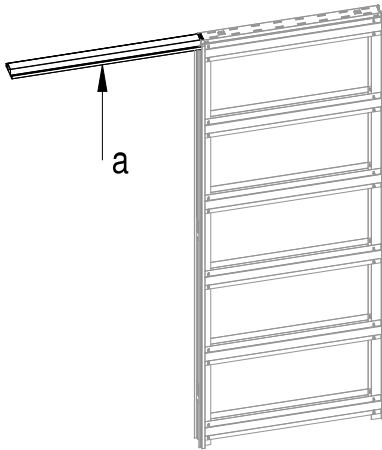



10.1

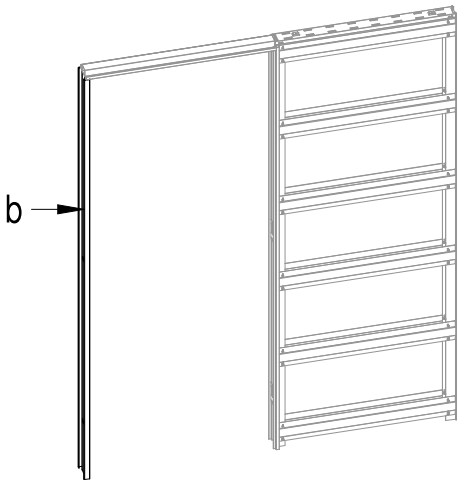

v5 = n° 2x 3,5x25

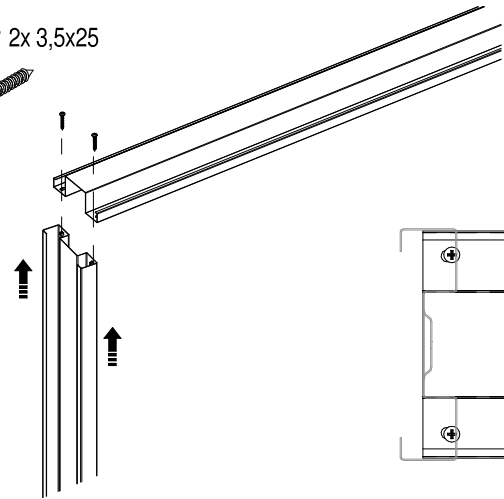







11.1

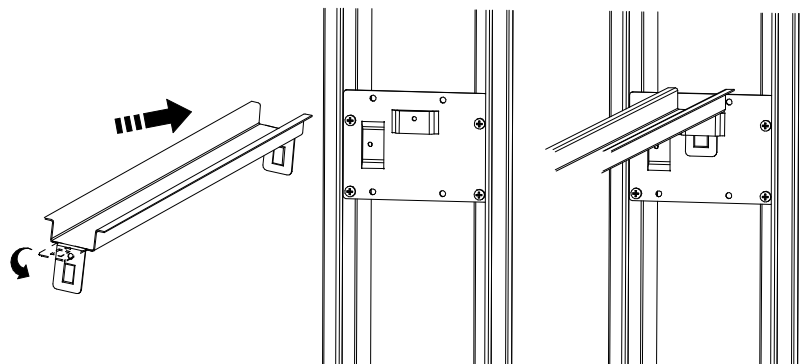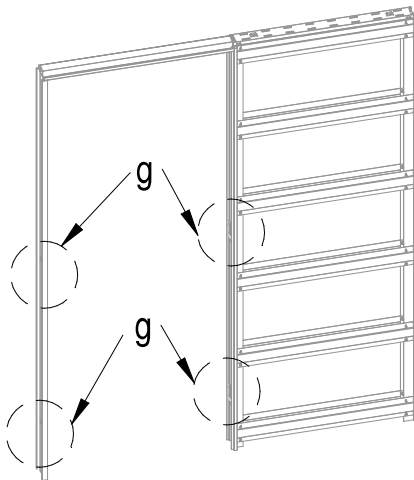

# Evokit 125

Posizionamento su tramezzo - Framing - Montage

Installation sur structure placo - Fijacion de la estructura - Ovikeyksen sijoittaminen seinärakenteeseen

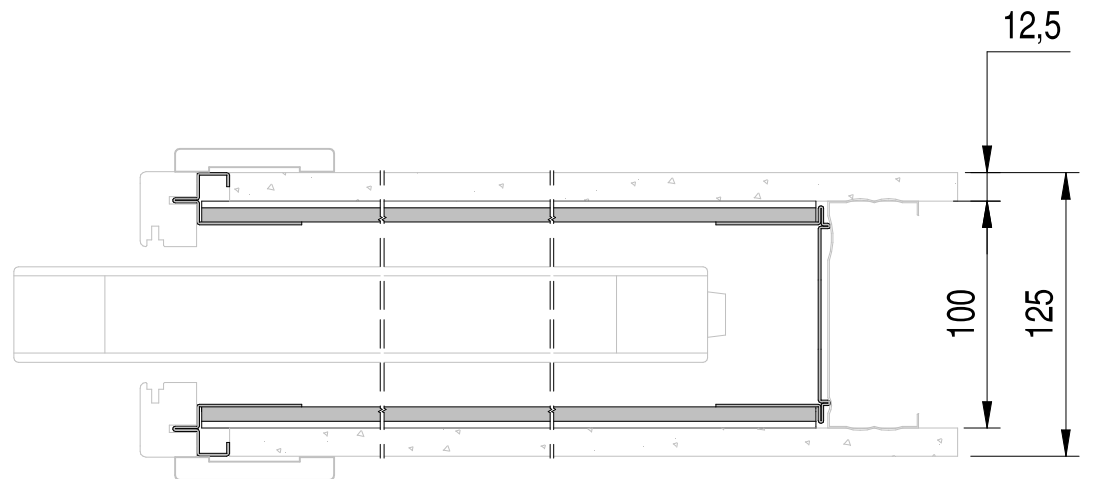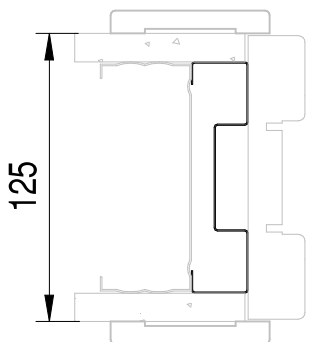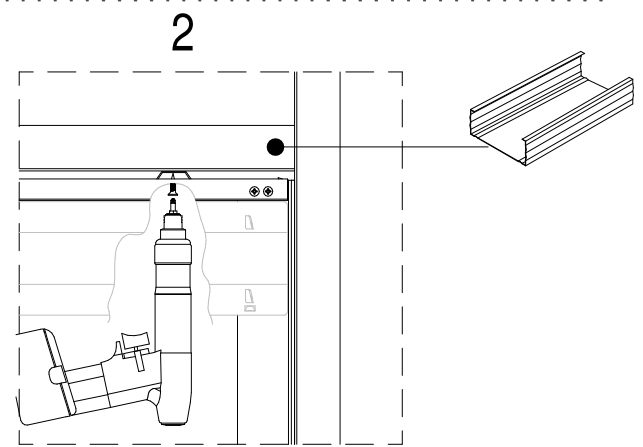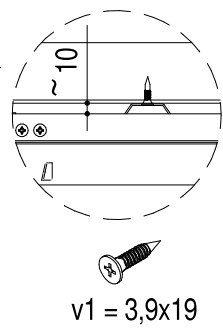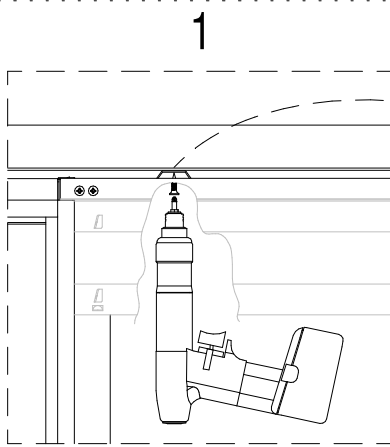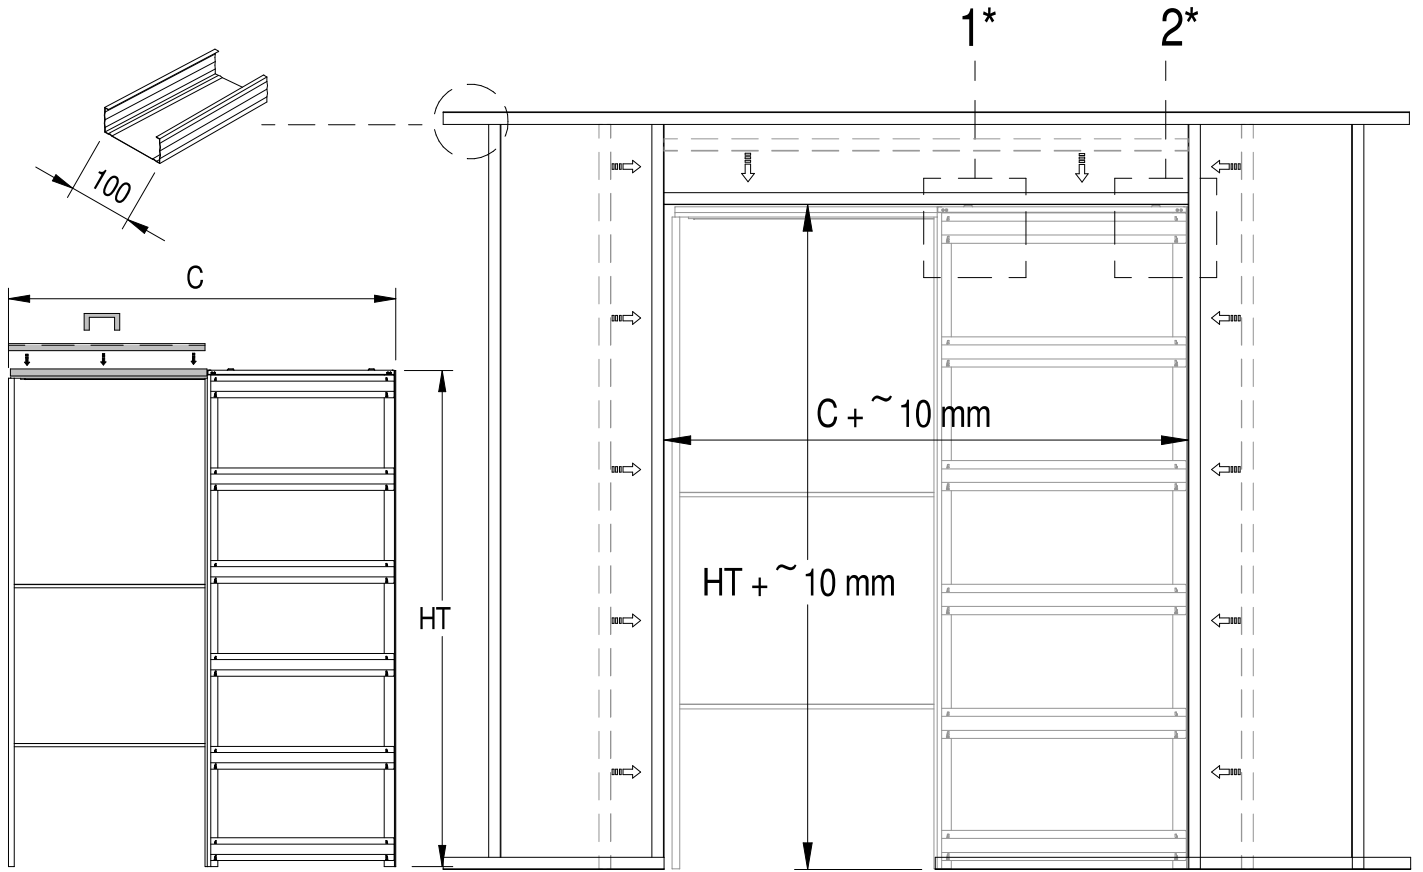



[www.safco.dk](http://www.safco.dk) | [info@safco.dk](mailto:info@safco.dk) | Phone : +45 8682 6677